

Model:

WS SB FOR IPAD Air 4&5 & Pro11 3&4 & Air 11M2

+ETHERNET

Family:

WALL-SMART

DEPTH CALIBRATION SCREWS

DWG NO.

PRODUCT SPEC.

002-4-837E-SPC

REVISION A

DATE 26/MAY/2024



## SMARTJ Model No.: 002-1-837E

### Make Your Wall Smart

# "WS SB FOR IPAD Air 4&5 & Pro11 3&4 & Air 11M2 +ETHERNET" - Product description:

The "WS SB FOR IPAD Air 4&5 & Pro11 3&4 & Air 11M2 +ETHERNET" is an adapter for in-wall flush installation of iPad Air  $4^{th}$  &  $5^{th}$  Gen., iPad Pro  $3^{rd}$  &  $4^{th}$  Gen. & iPad Air 11" M2 in solid Board walls.

The "WS SB FOR IPAD Air 4&5 & Pro11 3&4 & Air 11M2 +ETHERNET" firmly mounts the iPad while allowing easy insertion, removal and operation.

#### Key features and benefits:

- Flush with the solid surface wall.
- Wall mount may be mounted in any orientation.
- Allows easy insertion and removal of the iPad.
- Wall mount contains depth calibration screws and spacer allowing installation in solid surface boards of 1 [0.04"] up to 27.3 [1.08"] thickness.
- Includes 10/100 ethernet connectivity.
- See page 3 for routing dimensions.
- Designed for the use with iPad Air 4<sup>th</sup> & 5<sup>th</sup> Gen., iPad Pro 3<sup>rd</sup> & 4<sup>th</sup> Gen. & iPad Air 11" M2 (by Apple) (iPad is not included).
- Adapter kit contains:
  - 1. Wall adapter (X1)
  - 2. Spacer (X1)
  - 3. ST3x30 screws (X4)

#### **Key properties:**


- Dimensions: (W/H/D): 324.1mm (12.76")/ 211.5mm (8.33")/ 34.8/ (1.37")
- Power Supply: Wall mount includes POE to USB converter with Ethernet.


The installer should connect the wall mount to an IEEE 802.3at POE+ power source via CAT6 cable and RJ45 connector. (Please verify the power source can supply up to 25.5W)

- See page 2 for ethernet configuration.
- In case Ethernet connectivity is not necessary, consider using SKU# 002-1-837 with charging capability only.
- Weight: 0.9Kg, 1.98lbs.
- Material: Moisture resistant MDF (compliant with TSCA Title VI)

iPad® is a trademark of Apple Inc., registered in the U.S. and other countries.

POE to USB converter with Ethernet. connect a 48V IEEE 802.3af POE power source via a CAT5/6 cable and RJ45 connector

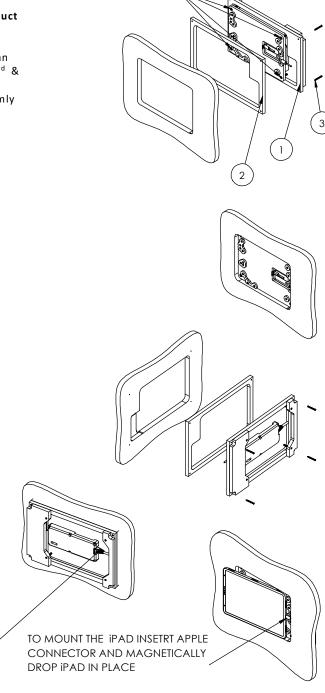

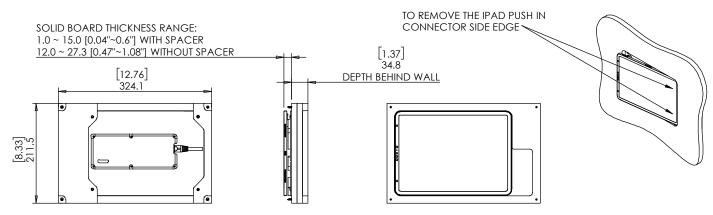

by Wall-Smart Ltd.

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS INFORMATION CONTAINED HEREIN IS PROPRIETARY AND MAY NOT BE USED, REPRODUCED OR COPIED WITHOUT WRITTEN CONSENT OF WALL-SMART.



WS SB FOR IPAD Air 4&5 & Model: Pro11 3&4 & Air 11M2

+ETHERNET

Family: **WALL-SMART** 

002-4-837E-SPC

PRODUCT SPEC.

DWG NO.

DATE 26/MAY/2024



## **POE to USB converter with Ethernet - Product Specifications**

USB Connector: Type C

Data Rate: 10/100

Input Voltage Range: 44-56 volts (IEEE 802.3at compliant)

Model No.: 002-1-837E

Max Power Outpot: 25 watts Operating Humidity: 5% to 90%

Operating Temperature Range: -10 - 60c

Output Voltage: 5V,2.6A; 9V,1.78A; 12V,1.34A; 15V,1.37A; 20V,1.15A

Power Input: 25.5 watts

iPad operation system version must be iOS 12.2 or later.

## **Connection steps:**

1. Plug the RJ-45 connector into an IEEE 802.3at PoE (POE+) with a data source.


2. Ensure the device you're connecting to is on and logged in.

3. Plug the USB-C connector into the mount.


The converter will automatically set up the network connection with your device and begin charging.

### Configuring the IP:

- 1. Navigate to Settings and go to "Ethernet".
- 2. After selecting you'll see all the options for PoE Texas LAN, and your IPV4 IP address information. If it shows "Automatic", that means you're getting a dynamically assigned IP address.
- 3. If you'd like to reconfigure the IP address, DNS, and HTTP Proxy settings, you can do that here. The most used option will be fixing your IP address by selecting the "Automatic" button.

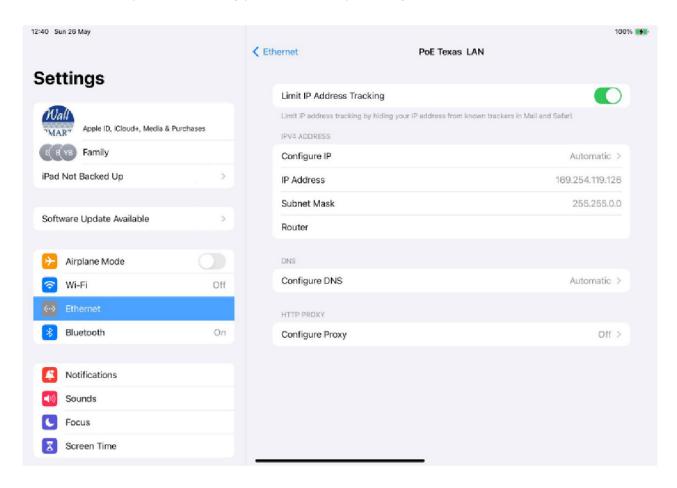

# WS SB FOR IF

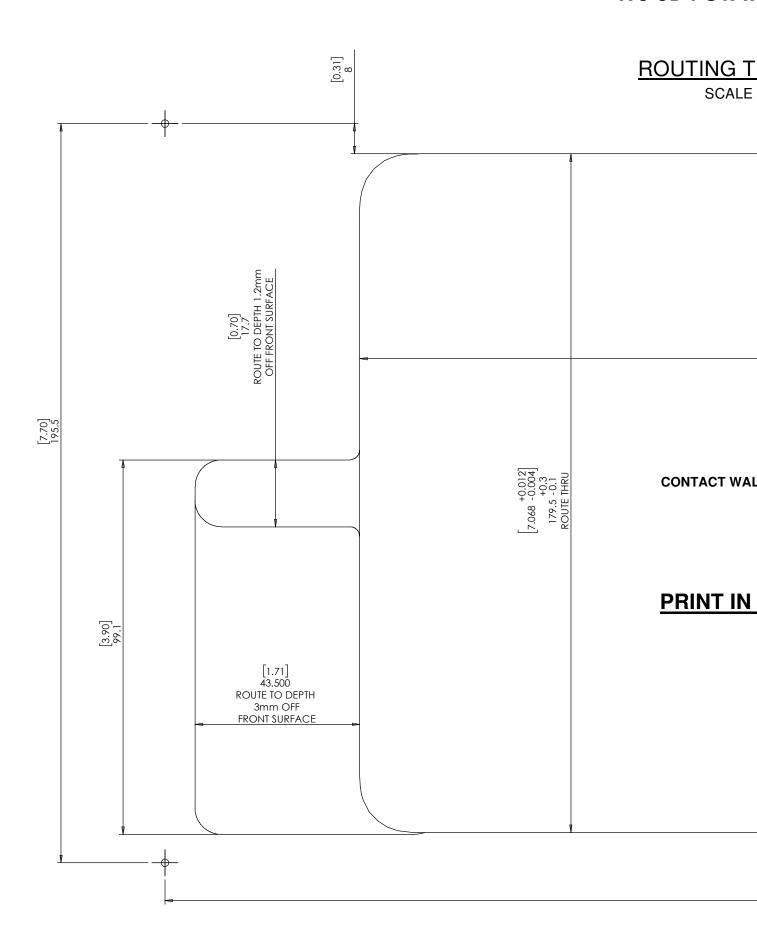

## SB FOR IPAD Air 4&5 & Pro11 3&4 & Air 11M2

