Wall SMART	Model: WS SB FOR SAVANT ASCEND WFB 2Gang	Family: WALL-SMART	
		DWG NO. 028-4-907-SPC	
	Model No.: 028-1-907	PRODUCT SPEC.	REVISION A DATE 06/SEP/2022

Make Your Wall Smart

WS SB FOR SAVANT ASCEND WFB 2G – Product description:

The "WS SB FOR SAVANT ASCEND WFB 2G" is an adapter for in-wall flush installation of a Savant Ascend 2G keypad in solid board walls.

The "WS SB FOR SAVANT ASCEND WFB 2G" firmly mounts the device while allowing easy access, insertion and removal.

Key features and benefits:

- Flush with the wall.
- Allows easy maintenance access.
- Includes depth calibration mechanism and a spacer.
- allowing installation in wide range of board thicknesses:
  With spacer: 6.62mm ~ 21.2mm [0.26" ~ 0.83"] thick.
  Without spacer: 18.22mm ~ 32.8mm [0.72" ~ 1.29"] thick.
- Designed for the use with Savant Ascend WFB 2G keypad. (keypad not included)
- Use spacer as routing template.
- Installation kit contains:
  1. Wall adapter (x1)
  2. Spacer frame (Routing template) (x1)
  3. Keypad adaptor frame (X1)
  4. ST3x40 screws (x4)
  5. M3X12 Screws (x4)
  6. M3 nut (X4)

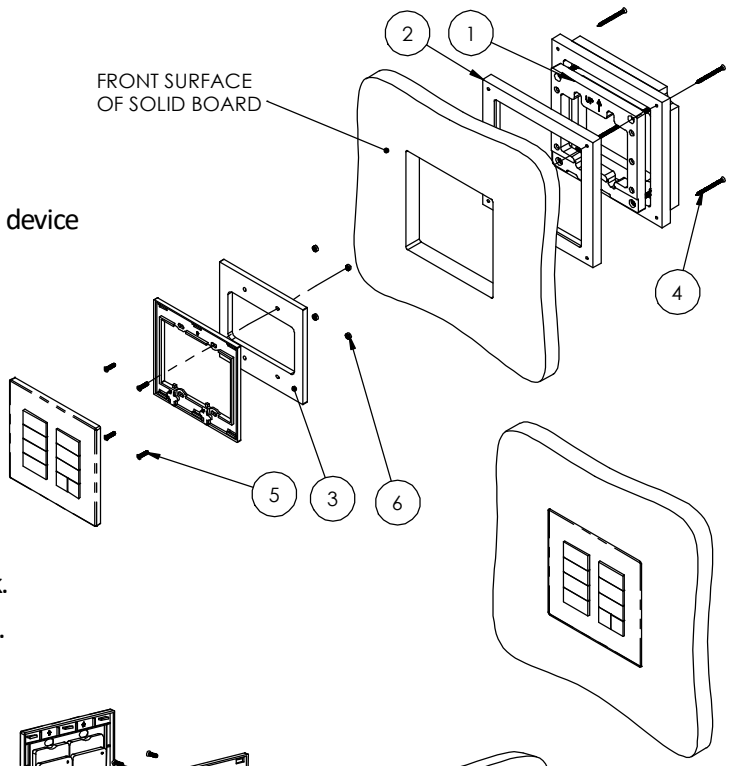

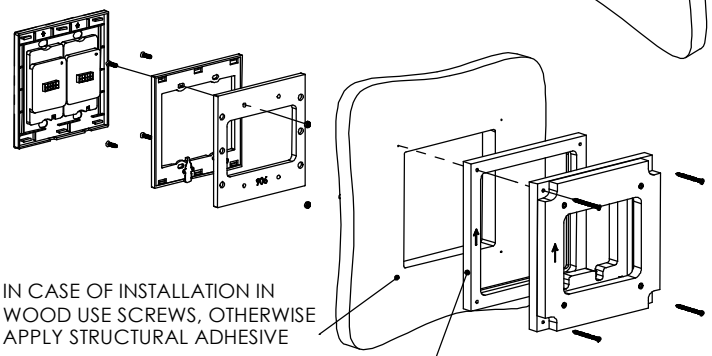

IN CASE OF INSTALLATION IN WOOD USE SCREWS, OTHERWISE APPLY STRUCTURAL ADHESIVE

FOR INSTALLATION IN BOARDS 6.62mm TO 21.2mm THICK USE ROUTING TEMPLATE AS INSTALLATION SPACER

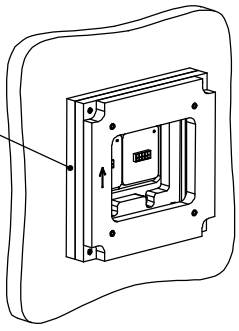

Key properties:

- Dimensions (W/H/D): 154.2mm (6.07")/ 152.1mm (5.99")/ 41.5mm (1.63")
- Power Supply: None (manual adapter).
- Weight: 0.4Kg, 0.88lbs.
- Material: Moisture resistant MDF (compliant with TSCA Title VI)

SOLID BOARD THICKNESS RANGE:
6.62 ~ 21.2 [0.26"~0.83"] WITH SPACER
18.22 ~ 32.8 [0.72~1.29"] WITHOUT SPACER

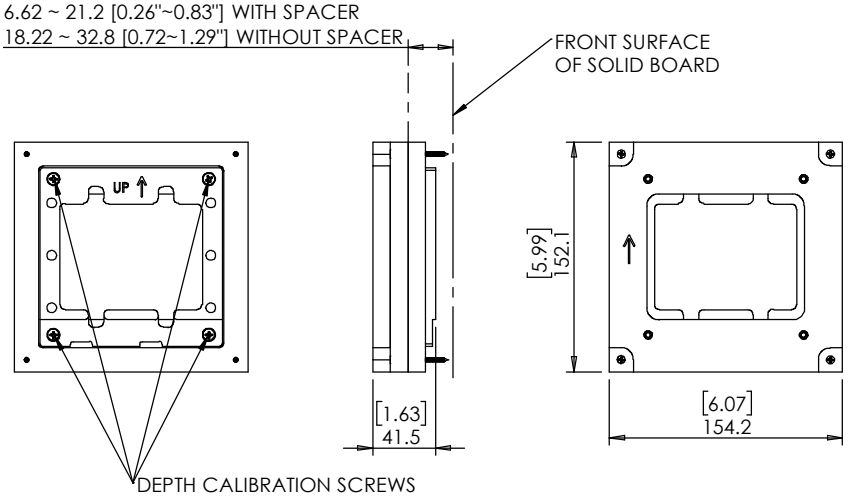

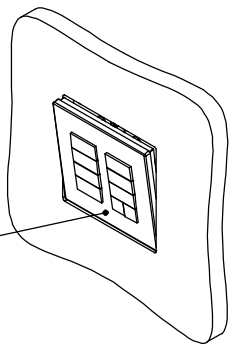

PUSH TO OPEN

INFORMATION CONTAINED HEREIN IS PROPRIETARY AND MAY NOT BE USED, REPRODUCED OR COPIED WITHOUT WRITTEN CONSENT OF WALL-SMART ©

Phone: (201) 205-2056 / info@wall-smart.com

Wall SMART	Model: WS SB FOR SAVANT ASCEND WFB 2Gang	Family: WALL-SMART	
		DWG NO. 028-4-907-SPC	
	Model No.: 028-1-907	PRODUCT SPEC.	REVISION A DATE 06/SEP/2022

CUTOUT ROUTING TEMPLATE
028-1-907

SCALE 1:1

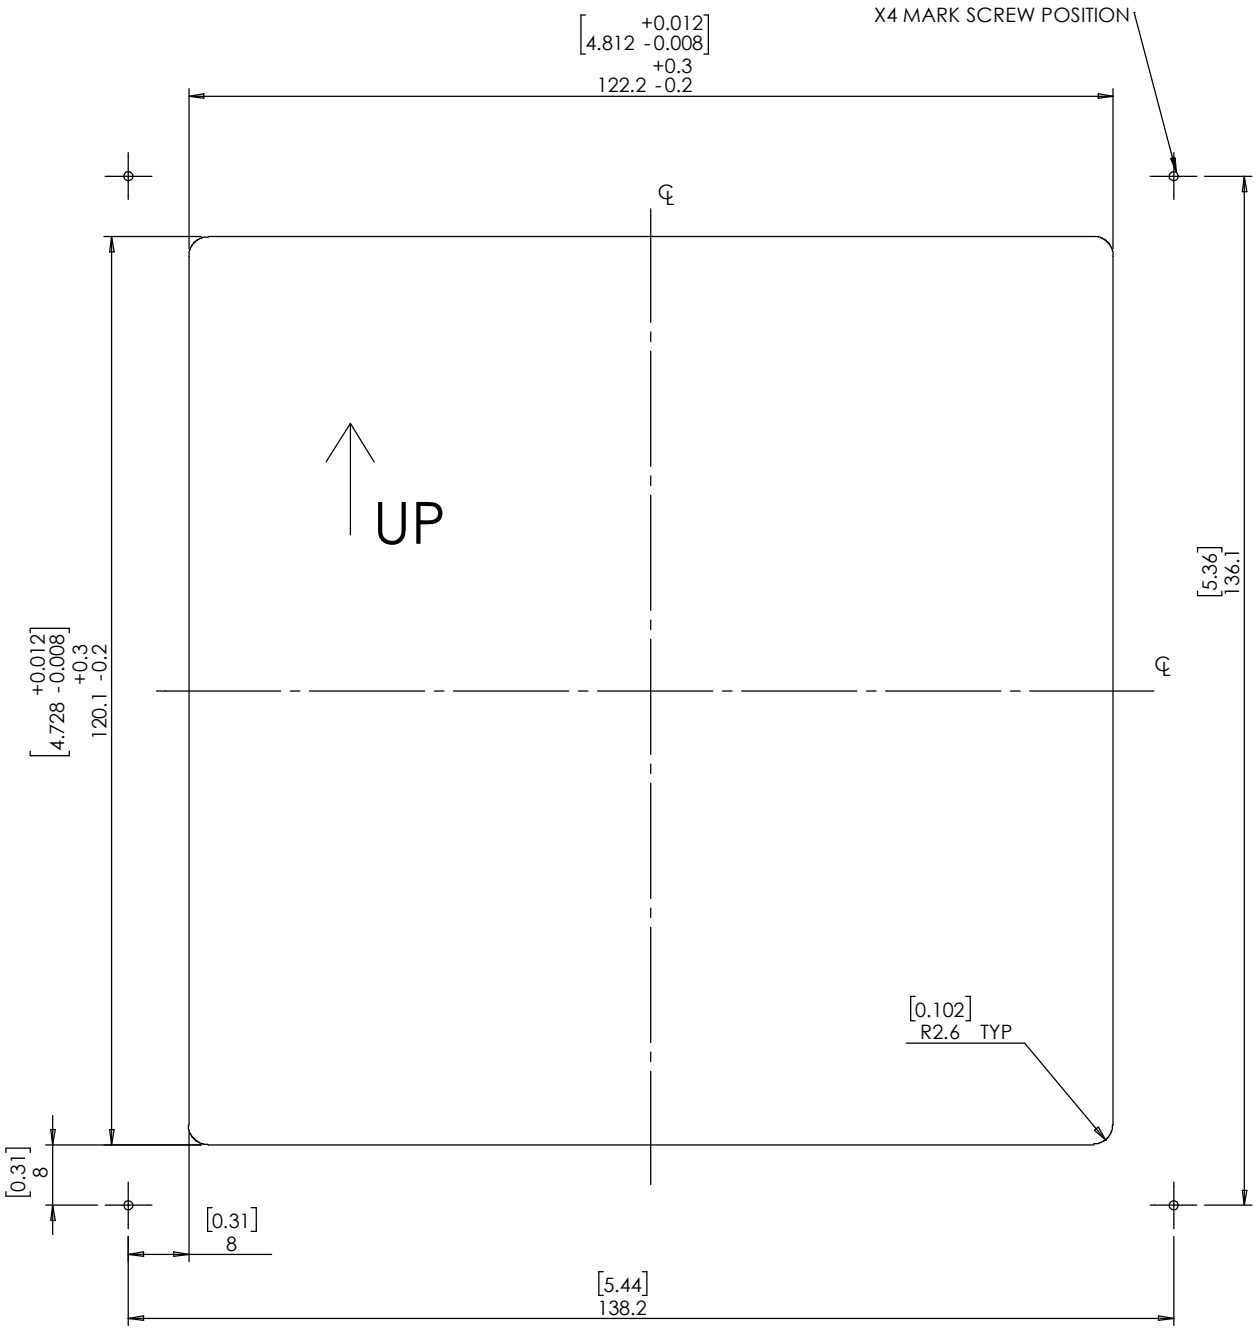

PRINT THIS PAGE 1:1 SCALE